

Model: SOLO 9.5rs

PN: 291200 12V DC 291280 12V DC

#### Introduction

#### ▶ Feature

Line pull: 4,309 kg / 9,500 lb synthetic rope first layer

Synthetic rope: 10mm × 30.5 m (3/8"×100')

Brake: Patented cone brake holds full load

Clutch: Turn the T-handle for rapid rope payout

Control: Both handheld pendant switch and built-in digital

two ways wireless transmitter power the winch

#### Unpacking

Winch assembly	1 pc
Control box	1 pc
· Remote control	1 pc
Synthetic rope with sling hook	1 pc
Hawse fairlead	1 pc
• 1.8 m (6′) 2 gauge battery lead	1 pc
Wireless transmitter	1 pc

#### ► Read this manual carefully

You should carefully read and understand this manual before operating it. Careless winch operation may result in personal injury hazards or property damage.

#### Installation

Before using the winch, make sure all electrical components have no corrosion or damaged; the environment should be clear and dry.


### ► Winch and hawse fairlead mountings

 It is very important that the winch will be mounted on a flat and hard surface of mounting channel in order to make sure the motor, drum and gearbox housing are aligned correctly.

- · Hawse fairlead does not mount to the winch directly.
- The synthetic rope shall be wound in an under-wound orientation only.
- Four (4) M10 x 1.50 pitch 10.9 grade with 63.8 N-m torque settings (maximum) high tensile steel bolts must be used in order to sustain the loads imposed on the winch mounting.
- Two (2) M10 x 1.50 pitch stainless steel bolts must be used for fastening the hawse fairlead into the mounting channel.


#### ▶ Wiring Diagram

 Attach the ground lead firmly to the negative (–) battery terminal and power lead to the positive (+) battery terminal. The voltage drop for the winch motor must not exceed 10% of the nominal voltage of 12V DC.

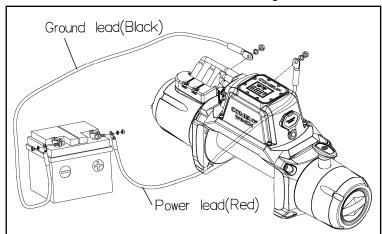

#### ▶ Nut fastening for motor & contactor

- 1. Holding the lower nut on the stub and fastening the upper nut clockwise.
- 2. The torque setting for nut is 14 N-m/124 lb-in.

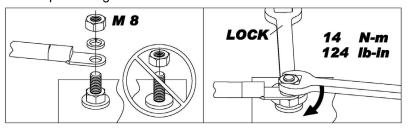

## **Warning**


 The winch is not intended to be used in any manner for the movement or lifting of personnel.

- The rated line pull shown is based on the first layer of rope on the drum.
- The rope winding on the drum shall remain 10 wraps from the drum to support the rated load.
- Manufacturer is not responsible for the results of misuse, misapplication, faulty installation or abuse of synthetic rope in any way.

# Parts List

Item No.	Description	Part No.	Qty
1	Waterproof motor w/housing 12V	883882	1
2	Tie bar kit	883883	2
3	Motor coupling	880005	1
4	Drum bushing	880006	2
5	Drum kit	881521	1
6	Gearbox support rack	883884	1
7	Grounding lead	880009	1
8	Synthetic rope	883248	1
9	1 <sup>st</sup> shaft	880011	1
10	3 <sup>rd</sup> ring gear kit	884310	1
11	3 <sup>rd</sup> stage carrier	880115	1
12	2 <sup>nd</sup> stage carrier	880116	1
13	1 <sup>st</sup> stage carrier	880117	1
14	1 <sup>st</sup> & 2 <sup>nd</sup> ring gear	880118	1
15	1 <sup>st</sup> pinion	880119	1
16	Clutch kit	883885	1
17	Gear box kit	882524	1
18	Cone brake disc kit	880122	1
19	Brake cover kit	883886	1
20	Hawse fairlead	883410	1
21	Mounting hardware	884311	1
22	Remote control	883887	1
23	Handsaver strap	880026	1
24	Bridge Control box 12V	883888	1
24-1	Control pack 12V	883889	1
24-2	Remote socket kit 12V	883890	1
24-3	PC board kit	883891	1
24-4	On/Off switch kit	884091	1
24-5	Power lead	883893	1
24-6	Motor thermal connector	883894	1
24-7	Wireless transmitter	883822	1
25	Brake clutch base	881100	1
26	Sling hook	882477	1

## **Winch Assembly**

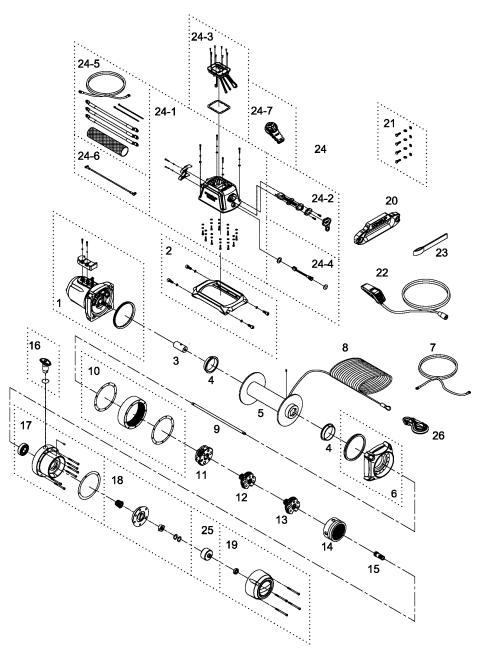

2023/03/07 Ver:00